

B4 Construction Loading

Cargas de Construcción

Construction loads are those loads imposed on the unfinished building as a result of the construction process. Typical construction loads include the weight of the workers, equipment, and building materials, to name a few. For example, a bundle of plywood sheathing or gypsum board stacked on trusses temporarily creates construction loads.



Cargas de construcción son las cargas que están impuestas a los edificios incompletos como resultado del proceso de construcción. Cargas de construcción típicas incluyen el peso de los trabajadores, el equipo y los materiales de construcción, etcétera. Por ejemplo, un paquete de entablado contrachapado o tabla de yeso apilados temporalmente sobre los trusses crean cargas de construcción.

Make sure the truss assembly is properly restrained and braced according to the guidelines in **BCSI-B1**, **BCSI-B2** and **BCSI-B7**, as applicable, before placing any construction loads on them. Construction loads shall only be placed on fully restrained and braced structures.

Asegúrese que el montaje del truss está adecuadamente restringido y arriostrado según las pautas en **BCSI-B1**, **BCSI-B2** y **BCSI-B7** antes de colocar alguna carga de construcción en la estructura. Solamente coloquen cargas de construcción arriba de estructuras cuales son restringidos y arriostrados completamente.

WARNING Stacking excessive amounts of construction materials on floor or roof trusses is an unsafe practice. Property damage, personal injury and/or death are possible if this warning is not heeded.

¡ADVERTENCIA! Apilando cantidades excesivas de cargas de construcción sobre trusses de piso o techo es una práctica peligrosa. Daño a la propiedad, herida personal y/o muerte son posibles si no se atiende esta advertencia.

NOTICE Trusses that have been over-stressed due to construction overloading will usually show excessive sagging (deflection) and at least a portion of this deflection will remain after the load has been removed. In more severe cases, broken truss members and/or failed truss joints may result.



NOTICE Los trusses que han sido sobrecargados debido a cargas de construcción excesivas usualmente demuestran una desviación excesiva, y por lo menos una parte de esta desviación se quedará aún después de que se haya quitado la carga. En casos más severos, miembros quebrados del truss y/o juntas falladas pueden resultar.

Construction Loading **DO's** and **DON'T's**

- ⊘ DON'T** stack materials on unbraced trusses.
- ⊘ DON'T** overload the trusses.
- ⊘ DON'T** exceed stack heights listed in the table below.


Que **HACER** y **NO HACER** Con Las Cargas De Construcción

- NO** apile materiales sobre trusses que no esten arriostrados.
- NO** sobrecargue los trusses.
- NO** exceda la altura de montón indicada en la tabla que sigue.

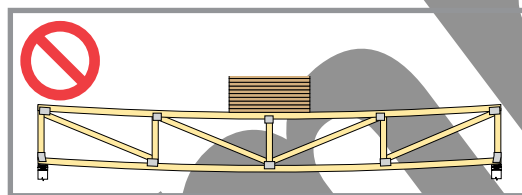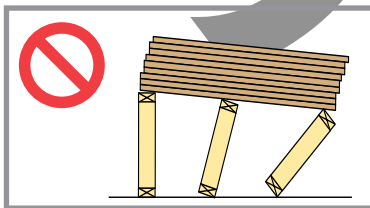

Properly restrain and brace trusses before stacking construction materials on them. Refer to BCSI-B1, BCSI-B2 and BCSI-B7 for additional information.


Maximum Stack Height for Material on Trusses ^{1,2}	
Maximua Altura de Montón para Material encima de los Trusses	
Material – Material	Height – Altura
Gypsum Board – Tabla de Yeso	12" – 12 pulgadas
Plywood or OSB – Madera Contrachapada u OSB	16" – 16 pulgadas
Asphalt Shingles – Teja de Asfalto	2 bundles – 2 paquetes
Concrete Block – Bloque de Hormingón	8" – 8 pulgadas
Clay Tile – Teja de Arcilla	3-4 tiles – 3-4 azulejos

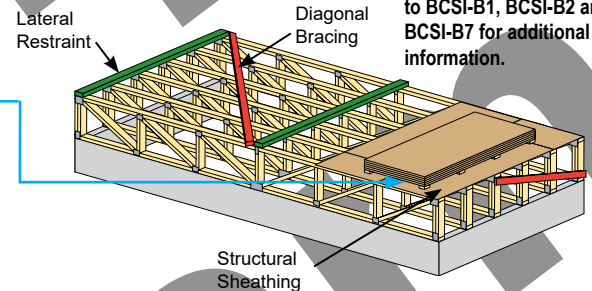

¹ This table is based on trusses designed with a live load of 40 psf or greater. For other loading conditions, contact a Registered Design Professional.

² Limit stacking periods to approximately one week, unless alternative information is provided by the Building Designer, Truss Designer or Truss Manufacturer.

DO distribute loads over as many trusses as possible. Position stacks of materials flat with the longest dimension perpendicular to the trusses, as shown.

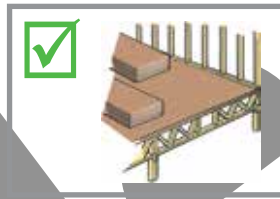

Sí distribuye cargas sobre el mayor número de trusses que sea posible. Posicione perpendicular a los trusses los montones de materiales llanos con la dimensión más larga como se indica el dibujo.

NO permite que el montón se incline contra ninguna pared, ni apile materiales para que sobrecarguen uno u grupos pequeños de trusses.

Sí amontone materiales al lado de los soportes exteriores o directamente sobre los soportes interiores de estructuras que están restringidas y arriostradas apropiadamente.

NO amonte los materiales en o cerca de la mitad del braguero. Nunca sobrepase alturas de montón indicadas en la tabla (véase la página 1) a menos que se proporcione información alternativa por el Diseñador del Edificio, el Diseñador del Braguero, o el Fabricante del Braguero.



NO deje caer cargas arriba de los trusses. El impacto puede dañar los trusses aunque si sea pequeña la carga.

Sí deje materiales de construcción encima del equipo de levantar hasta el momento de la instalación, si es posible.

NO amontone materiales en un lugar que puede producir inestabilidad como en voladiza, salientes o cerca de las conexiones de trusses-a-travesaño.

NO apile teja de sobra y/o otros residuos de construcción sobre los trusses.


DON'T allow the stack to lean against walls, or stack materials so they overload single or small groups of trusses.

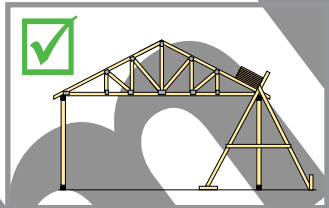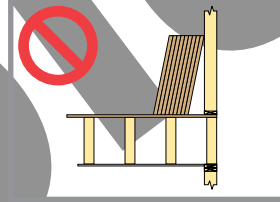


DO stack materials along exterior supports or directly over interior supports of properly restrained and braced structures.

Note: Truss bracing not shown for clarity.

DON'T stack materials at or near the midspan of the truss. **Never** exceed stack heights provided in the table (see page 1) unless alternative information is provided by the Building Designer, Truss Designer or Truss Manufacturer.

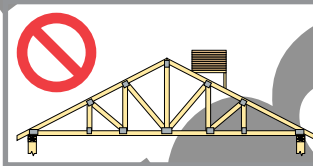


DON'T drop materials on trusses. The impact can damage the trusses even if the weight of the material is light.

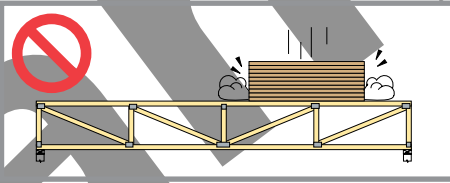

DO leave construction materials on lifting equipment until installation, if possible.



DON'T pile cut-off tile and/or other construction waste on trusses.

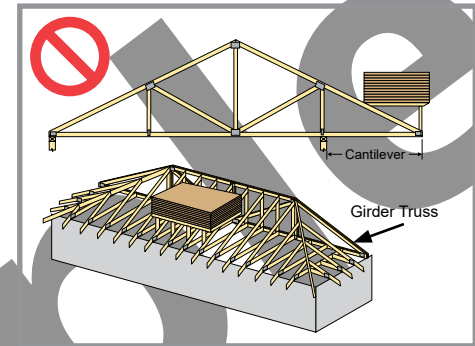

DON'T stack materials at locations that will produce instability, such as on cantilevers, overhangs or near truss-to-girder connections.

***Contact the component manufacturer to obtain the referenced document or consult a Registered Design Professional for more information on this subject.

This document summarizes the information provided in Section B4 of the 2018 Edition of Building Component Safety Information BCSI - Guide to Good Practice for Handling, Installing, Restraining & Bracing of Metal Plate Connected Wood Trusses. Copyright © 2004-2019 Structural Building Components Association. All Rights Reserved. This guide or any part thereof may not be reproduced in any form without the written permission of the publisher. Printed in the United States of America.

SBCA

6300 Enterprise Lane • Madison, WI 53719
608-274-4849 • sbcindustry.com

Job Number:
SAMPLE

Copyright © 2004-2020 Structural Building Components Association. All rights reserved. This guide or any part thereof may not be reproduced in any form without the written permission of the publishers. Please visit <https://docs.sbcindustry.com> for more information about subscribing.